


TO	SUBJECT	GLASS COVER REMOVAL
		(PERFORATED CUSHION INSERT)
	DATE	11/16/2012
	ISSUE NO.	2012-A
	BY	JAB

Glass-Trac Steam-Trac Level-Trac Magne-Trac

Note: This document is not the instruction manual. The instruction manual should be reviewed in its entirety prior to installation of equipment.

1) Check the bolt torque by following the retorque procedure on the torque tag, and instruction manual.

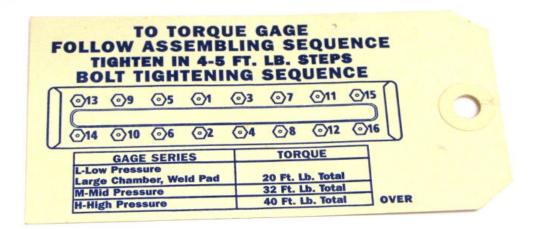


2) Review the yellow caution tape, then remove from gage.





TO	SUBJECT	GLASS COVER REMOVAL
		(PERFORATED CUSHION INSERT)
	DATE	11/16/2012
	ISSUE NO.	2012-A
	BY	JAB

3) Under the yellow caution tape, there is a perforated cushion. This part protects the glass from dirt, dust and debris until the gage is ready to be placed in service.

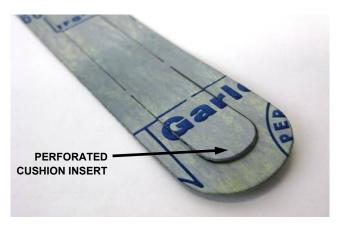



Glass-Trac Steam-Trac Level-Trac Magne-Trac

4) Pry up one edge, and remove the perforated insert to expose the glass.



